


B-PUMP

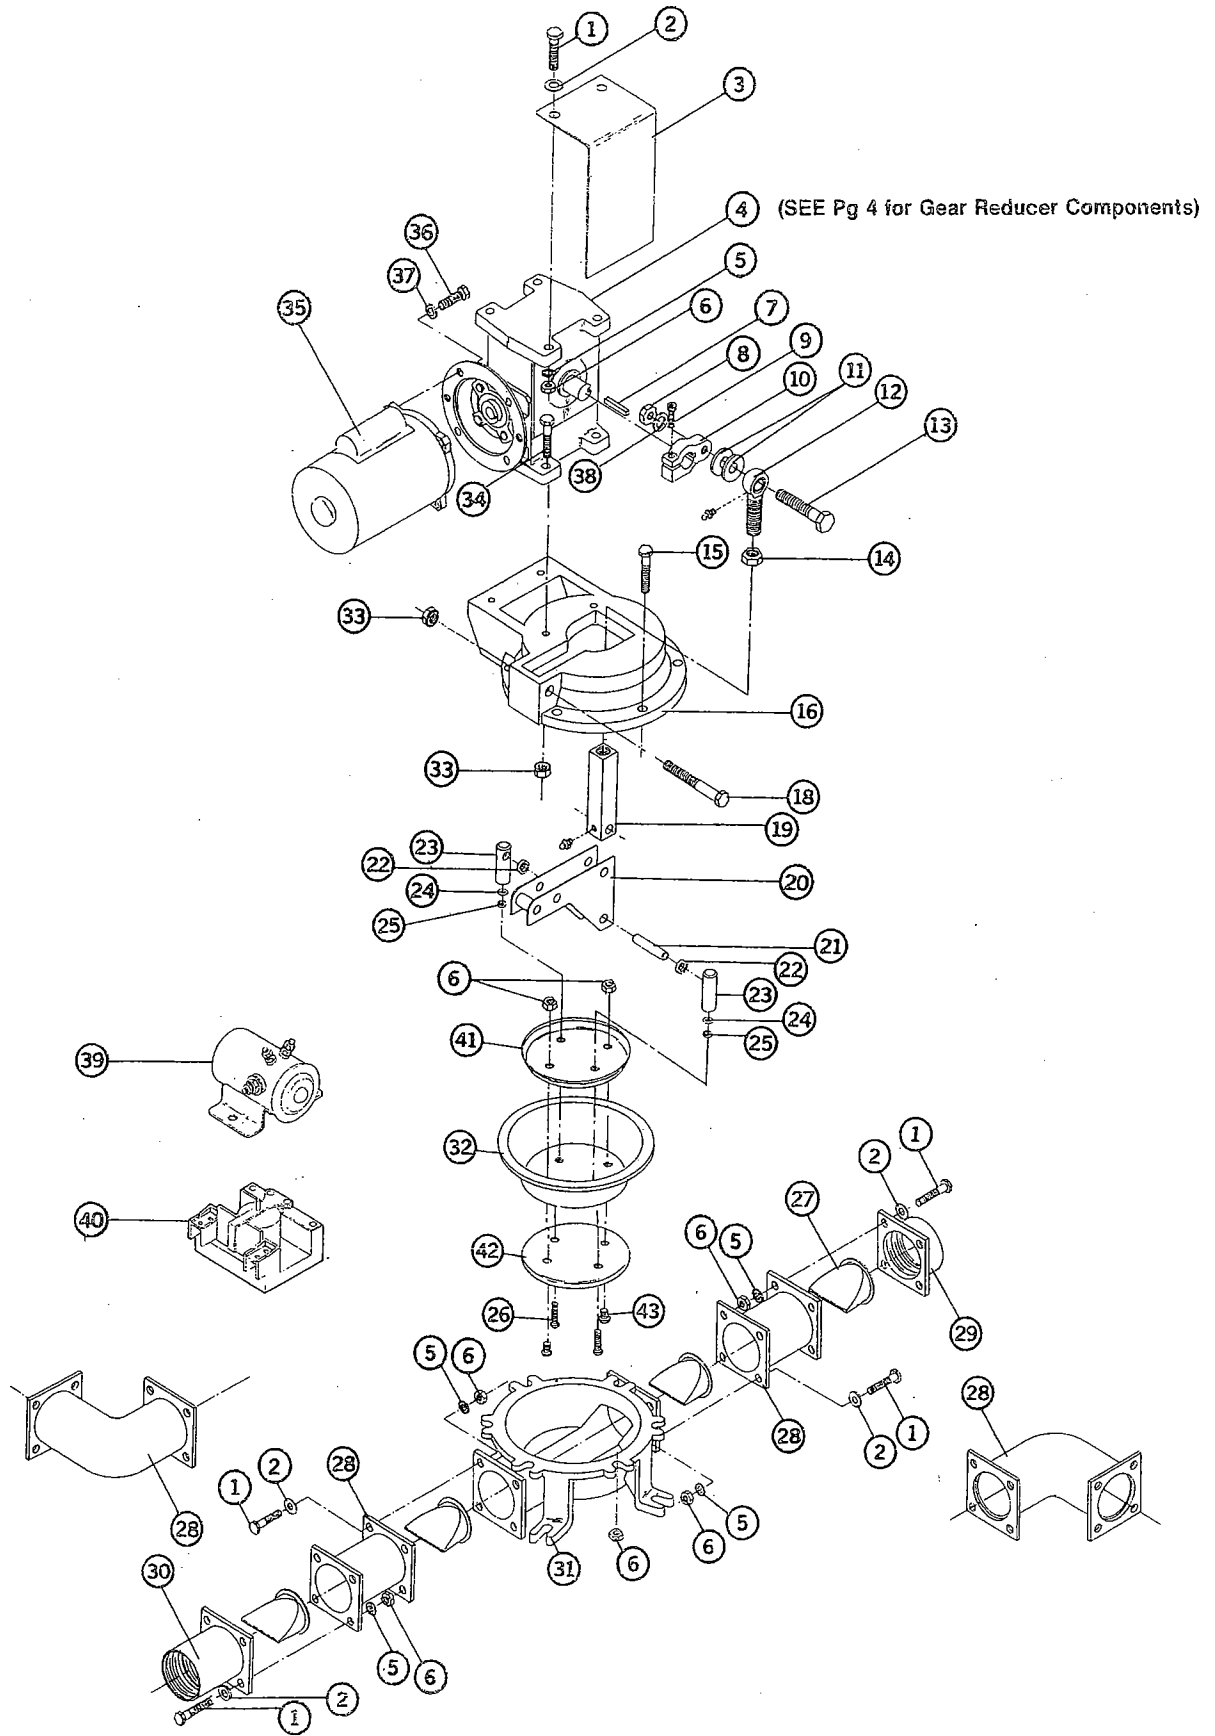

PARTS LIST

Item	Part Number	Description	Quantity
1	340687	Hex Head Screw, 1/4" - 20 x 1" SS	18
2	346795	Flat Washer, 1/4" SS	18
3	340723	Gear Reducer Cover	1
4	640037	Gear Reducer	1
5	346615	External Lockwasher 1/4" SS	18
6	346604	Hex Nut, 1/4" - 20 SS	26
7	640223	Output Shaft Key	1
8	347912	Hex Nut, 1/2" - 13 SS	1
9	340689	Socket Head Screw, 5/16" - 18 x 1 1/4" SS	1
10	340594	Eccentric	1
11	340690	Flat Washer, 1 3/8" x 9/16" x 7/64" SS	2
12	340721	Bearing Rod	1
13	347914	Hex Head Screw, 1/2" - 13 x 2" SS	1
14	340722	Hex Nut, 1/2" - 20 SS	1
15	340698	Hex Head Screw, 1/4" - 20 x 1 3/4" SS	6
16	340724	Pump Body Cover	1
18	340726	Hex Head Screw, 3/8" - 16 x 3" SS	1
19	340727	End Rod	1
20	340728	Pivot Hinge	1
21	340729	Pivot Pin	1
22	340730	Pivot Pin Post Spacer	2
23	340731	Pivot Pin Post	2
24	340732	Post O-Ring	2
25	340733	Flat Washer, 7/16" x 1/4" x 3/32"	2
26	341901	Pan Head Screw, 1/4" - 20 x 3/4" SS	2
27	348702	Duck Bill Valve	4
28	340675	Valve Housing	2
	340736	Valve Housing - Elbow	2
29	340673	Inlet Flange	1
30	340674	Outlet Flange	1
31	340735	Diaphragm Housing	1
32	340734	Diaphragm	1
33	340691	KEPS Nut, 3/8" - 16 SS	5
34	340688	Hex Head Screw, 3/8" - 16 x 1 1/2" SS	4
35	341188	Motor, 115 VAC	1
	341146	Motor, 12 VDC	1
	341127	Motor, 24 VDC	1
	341118	Motor, 32 VDC	1
	340918	Motor, 220 VAC 50 Hz	1
36	347773	Hex Head Screw, 3/8" - 16 x 1" SS	4
37	347777	External Lockwasher, 3/8" SS	4
38	340692	Internal Lockwasher, 1/2" SS	1
39	345831	Solenoid, 12 VDC	1
	346900	Solenoid, 24 VDC	1
	346530	Solenoid, 32 VDC	1
40	341431	Relay, SPST 115 VAC (Model 115)	1
	341805	Relay, Overload (Model 220)	1
41	340810	Top Plate	1
42	340811	Bottom Plate	1
43	340813	Self Sealing Pan Head Screw, 1/4" - 20 x 1/2" SS	2